



## Operator's Handbook Micro U10-3

### Some items only apply to newer machines

Be sure to read the standard edition of the operator's manual and ensure that you understand all instructions before operating this machinery.

Only operators who have received sufficient training and instruction are permitted to operate the construction machinery. All operators must observe the safety rules.

#### 1. Before getting on the machine

- a) The operator must read and understand the operator's manual carefully.
- b) The operator must wear appropriate protective equipment.
- c) The operator must check the surrounding area.

#### 2. For safe operation.

- a) Check the surrounding area.
- b) When getting on and off the machine, check that the pilot control lock lever is up.
- c) Keep the swing lock cover down when the swing function is not used.
- d) Keep the AUX lock cover down when the AUX function is not used *(for pedal-type model only)*
- e) Adjust the rear view mirror to obtain the ideal field of view *(for models fitted with mirrors only)*
- f) Adjust the seat and the seat belt length, and then fasten the seat belt.

#### 3. Starting the engine.

- a) Check the surrounding area.
- b) Fasten the seat belt before starting the engine.
- c) Where fitted enter the keypad code *(information supplied in a text)* before turning the ignition.
- d) Start the engine only from the operator's seat.
- e) Make sure that all control levers are in their neutral positions before starting the engine.
- f) Check that the swing lock cover is down before starting the engine.
- g) Check that the AUX lock cover is down before starting the engine *(for pedal-type model only)*

#### 4. Safety rules during operation.

- a) Never use the machine in any unapproved way [\(refer to operator's manual\)](#) .
- b) Operate the machine only from the operator's seat.
- c) Never extend any part of your body out of the window, door or outside the ROPS protective envelope during operation.
- d) Keep the seat belt fastened while operating the machine.
- e) To avoid hitting the front attachment, perform the swing operation slowly.
- f) To avoid sudden movements, keep the swing lock cover down when the swing function is not used.
- g) To avoid sudden movements, keep the AUX lock cover down when the AUX function is not used *(for pedal-type model only)*.
- h) Never use the machine for demolition work, suspended work, or forestry work unless the appropriate equipment is mounted *(refer to the operator's manual)*.
- i) When opening and closing the front and side windows or when mounting and removing the bottom window, be sure to put the lock lever and cover in the locked position before standing up from the operator's seat.

#### 5. When leaving the machine.

When stopping operation and leaving the operator's seat, stop the engine, lower the bucket/dozer to the ground, and raise the pilot control lock lever. You should always remove the machine keys when not in use.

[Click this link to the Operator's Manual](#)

For any help or support please call our sales office during business hours **01202 673 403**